



Showerslab

Available Finishes

Carrara marble
Noir sully

Assembly

Showerslab assembly includes;

- Slab base
- Shower waste with removable centre piece
- Selected finish insert

Cleaning

Natural stone - Wipe up spills immediately. Clean with warm soapy water (a mild, neutral PH7, non-acidic detergent) and a soft cloth. Finish by cleaning off detergents with a soft wet cloth and towel dry. To ensure your natural stone looks its best year after year, apply a stone sealant approximately every 6 months or when required.


Recommended fittings and set up

Showerslab are the perfect way to finish off a bathroom. The shower slab has a centered waste and is to be installed on a cement base with a 3 mm waterproof membrane.

Important

This is not an installation guide. Please contact OMVIVO for technical details. Product specifications are subject to alteration without notice.

©OMVIVO Pty Ltd. 1998.

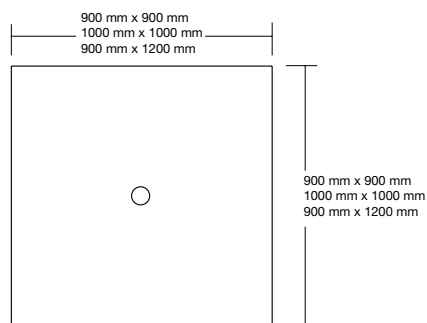

Om vivo Pty Ltd Schiavello Complex T: + 61 3 9339 8130
1 Sharps Road Tullamarine F: + 61 3 9330 8611
Victoria Australia 3043 info@omvivo.com www.omvivo.com

Note: due to varying manufacturing methods, the dimensions illustrated here are nominal and subject to change. Omvivo has detailed, to the best of its ability, the most approximate measurement possible for each product given the method of manufacturing used.