



# Mono Stone with optional Pedestal

## Available finishes

Selection of natural stones.

For available finishes, please refer to the Omvivo website or contact Omvivo directly.

## Pedestal available finishes

Solid surface white.

Selection of timber veneers.

For available finishes, please refer to the Omvivo website or contact Omvivo directly.

## Assembly

Mono basin assembly includes:

- Basin
- $\varnothing 32$  mm chrome pop up waste
- Rubber seals
- Chrome locknut

Pedestal is an optional extra.

## Cleaning

Natural stone - Wipe up spills immediately. Clean with warm soapy water (a mild, neutral PH7, non-acidic detergent) and a soft cloth. Finish by cleaning off detergents with a soft wet cloth and towel dry. To ensure your natural stone looks its best year after year, apply a stone sealant approximately every 6 months or when required.

Veneer - Clean with a mild, non acidic, non abrasive detergent and soft cloth. Finish by cleaning off detergents with a soft damp cloth and towel dry.

Solid surface - Clean with a mild detergent and a soft cloth. For more stubborn marks a very mild abrasive cleaner can be used with a soft cloth over the entire surface in wide circular motions. Finish by cleaning off detergents with a soft wet cloth and towel dry.

## Additional information and recommended fittings

Use an outlet that uses 5-7 litres per minute.

For best results the water should fall at a 90 degree angle, directly down onto the vessel. Omvivo outlets are ideal to use with the Omvivo basin collection. The Mono vessel can be partnered with the Mono pedestal or bench mounted. The mono pedestal is suitable for S or P trap plumbing. It has an opening at the rear for access to the waste and for a P trap.

## Important



This is not an installation guide.

Please contact OMVIVO for technical details.

Product specifications are subject to alteration without notice.

©OMVIVO Pty Ltd. 2006.

## Assembly

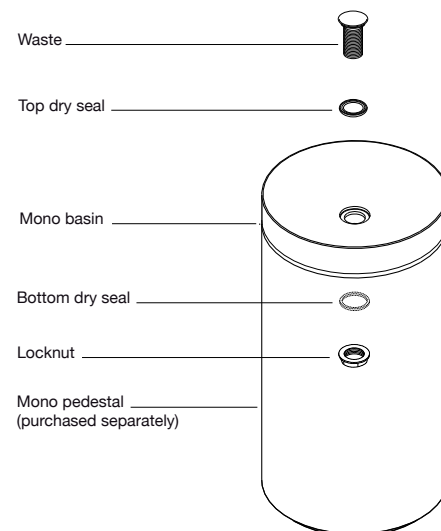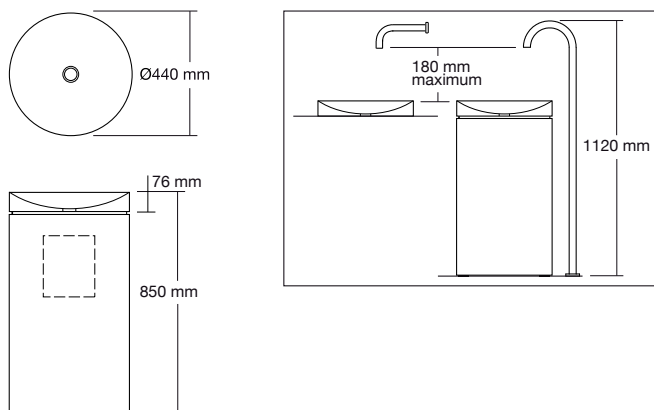

design Thomas Coward



**OMVIVO**

Omvivo Pty Ltd Schiavello Complex T: + 61 3 9339 8130  
1 Sharps Road Tullamarine F: + 61 3 9330 8611  
Victoria Australia 3043 info@omvivo.com

www.omvivo.com

Note: due to varying manufacturing methods, the dimensions illustrated here are nominal and subject to change. Omvivo has detailed, to the best of its ability, the most approximate measurement possible for each product given the method of manufacturing used.